


FIXTURE INSTALLATION

Model C919 The Madison Avenue

NOTE: Due to the large size of this fixture, you may need help during installation. We have found that things go more smoothly if one person holds the fixture close to the wall while the other connects the wiring.

1. Loosen the lock screw (A) on the decorative brass shade ring until it is flush with the inside of the ring.
2. Turn the steel pan (B) 2" counterclockwise and lift it out of the ring and shade assembly.
3. Remove crossbar (C) from the threaded pipe (D).
4. Using the screws supplied with the electrical box, attach crossbar (C) to the box.
5. Using the green ground screw on the crossbar (C) connect the house ground wire (if present).
6. Remove the lockwasher (E) and the locknut (F) from the threaded pipe (D). Screw the threaded pipe at least three full turns into the crossbar (C).
7. While holding the fixture pan close to the ceiling, connect the fixture wires to the house wiring. *(See other side for important wiring information.)*
8. Slip the pan (B) over the threaded pipe (D) so that it extends through the hole in the pan. Place the lockwasher (E) over the threaded pipe and screw on locknut (F). Tighten the locknut securely with pliers. The pan should fit firmly against the ceiling.
9. To attach the shade ring assembly to the pan (B), position decorative nuts (G) about 2" to the left of the tabs (H) on the ceiling pan. Twist the shade ring assembly clockwise until it stops. This engages the studs on the back side of the decorative nuts with the tabs on the ceiling pan. **Make sure all four studs are engaged.**
10. Lock the shade ring assembly in place by screwing in the lock screw (A) completely. The shade must be turned fully clockwise before the lock screw will go in all the way. **If the lock screw does not screw in all the way, the fixture is incorrectly installed, and may fall.**
11. Flip the switch and enjoy!

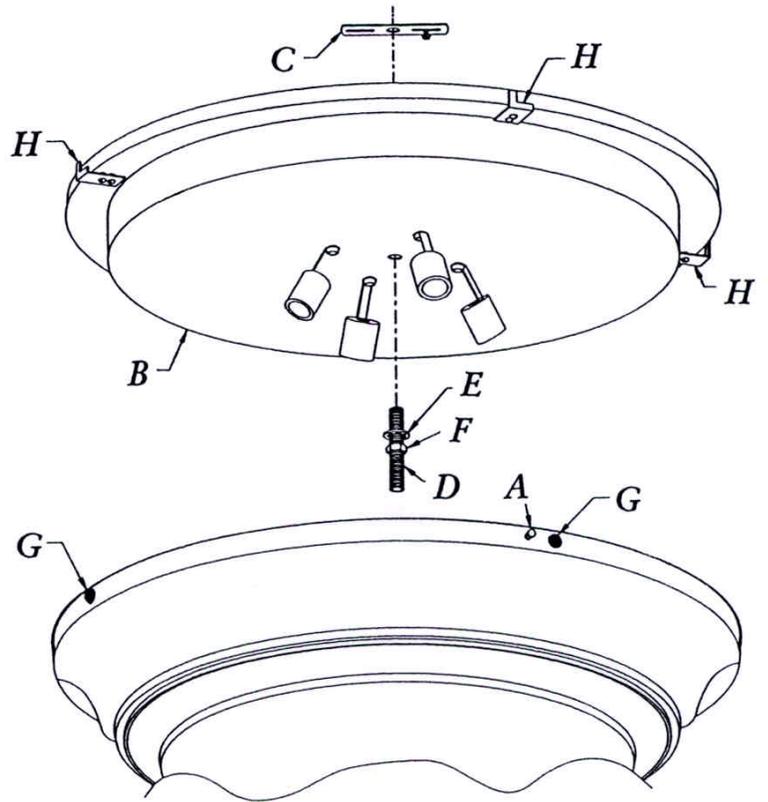

Please see the instructions in your owner's packet for the long-term care of your fixture.